0026/ 01 / 23 EN



PRODUCT DESCRIPTION

Ball valves are shutoff valves and are not intended for flow control. They perform the function of quickly shutting off the flow on pipelines for domestic use of hot and cold water supply systems, heating. Does not create resistance to flow


Ball valves must not be used as control valves.


The drain valve is used as a shut-off and drain device for tanks, water heaters and other elements of pipeline systems. For ease of draining, a drain fitting is provided in the design of the valve.




TECHNICAL PARAMETERS	
Closure tightness class	A
Reparability	No
Nominal diameter	1/2"
Nominal operating pressure, PN	10 bar
Maximum operating temperature	100 °C
Minimum operating temperature	- 10 °C
Connection type	Threaded
Threaded connection standard	ISO288/1

DIMENSIONS

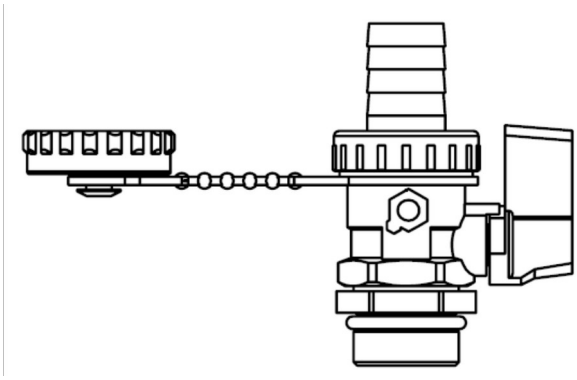

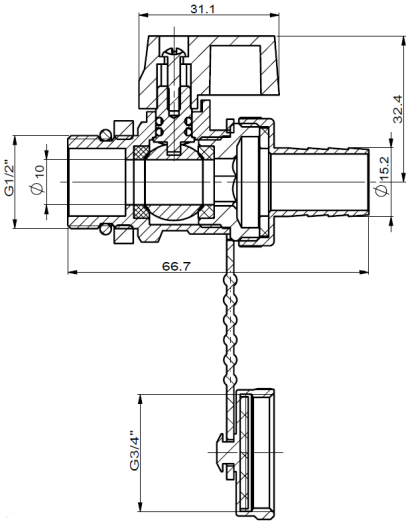

DESIGN AND MATERIALS		
1	Big half-body	Brass CW617N
2	Small half-body	Brass CW617N
3	Stem	Brass CW617N
4	Ball	Brass CW617N
5	Seat ring (2 pcs)	PTFE
6	Stem seal	EPDM
7	Handle	Aluminum
8	Handle fixing screw	Stainless steel AISI201
9	O-ring	EPDM
10	Fitting	Brass CW617N
11	Stop ring	Brass CW617N
12	Plug	Brass CW617N
13	O-ring	NBR
14	Seal	NBR
15	Plug holder	NBR

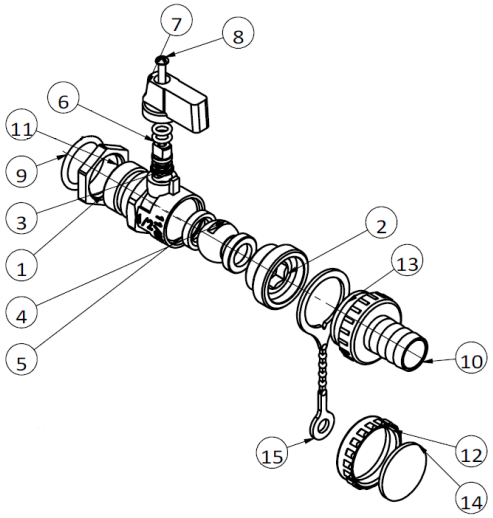

OPERATING PRINCIPLE

The valve consists of a composite brass body (1,2), a ball (4), which is closed with a butterfly (7). The force of rotation of the butterfly on the ball is transmitted by the rod 3 with two O-ring seals made of EPDM elastomer.
The butterfly is attached to the stem with a screw (8).
The drain valve is completed with a drain fitting (10) and a plug (12).
The ball is placed between the teflon seat rings (5).

INSTALLATION REQUIREMENTS

1. The valve can be installed in any mounting position.
2. The valve should not experience loads from the pipeline (bending, compression, tension, torsion, distortion, vibration, misalignment of nozzles, uneven tightening of fasteners). If necessary, supports or compensators should be provided to reduce the load on the fittings from the pipeline.
3. The misalignment of the connected pipelines should not exceed 3mm for a length of up to 1m plus 1mm for each subsequent meter.
4. The coupling connection of the valve must be performed using PTFE-tape or sanitary polyamide thread as sealing materials.
5. For installation of the valve, it is not allowed to use pipe lever wrenches higher than the second number, while it is allowed to act with the key only on the hexagon of the valve inlet pipe. 6. Attachment of flexible hoses to the tap fitting should be done using standard screw clamps. The use of wire twists for fastening hoses of various types is not allowed.
7. The union nut is screwed on by hand. Keys are not allowed.

OPERATION AND MAINTENANCE REQUIREMENTS

1. Valves must be operated at the pressure and temperature specified in the specification table.
2. It is not allowed to operate valve with a loose handle fastening screw.
3. It is strictly forbidden to allow the working medium to freeze inside the tap. When draining the system in winter, the valve must be left half-open so that the working medium does not remain in the cavities behind the shutter.
4. To prevent "sticking" of the ball valve to the seat rings, it is recommended to perform a forced closing/opening cycle of the valve once every 6 months.

MANUFACTURER

ZUOYOU GLOBAL BUSINESS LIMITED
Address of production: Shamen Industrial Area, Yuhuan, Taizhou, Zhejiang, China 317607
Country of origin: China

Brand **zencQ** belongs to **NEORUBY GmbH**

NEORUBY GmbH ● Am Hamburger Bahnhof 3, 10557 Berlin, Germany

https://zencq.com/